

Trimmer Head Replacement

Packing List

- Trimmer head
- Instruction sheet

Instructions

510789

Replacing the Trimmer Head

1. The line cartridge on your string trimmer is fully disposable. If the cartridge has been damaged, detach the trimmer head and dispose of it properly. You may then attach a replacement cartridge.
2. Press the locking pin and turn the cartridge counterclockwise to remove it (Fig. 1).
3. Press the locking pin and turn the trimmer head clockwise to assemble it (Fig. 1).

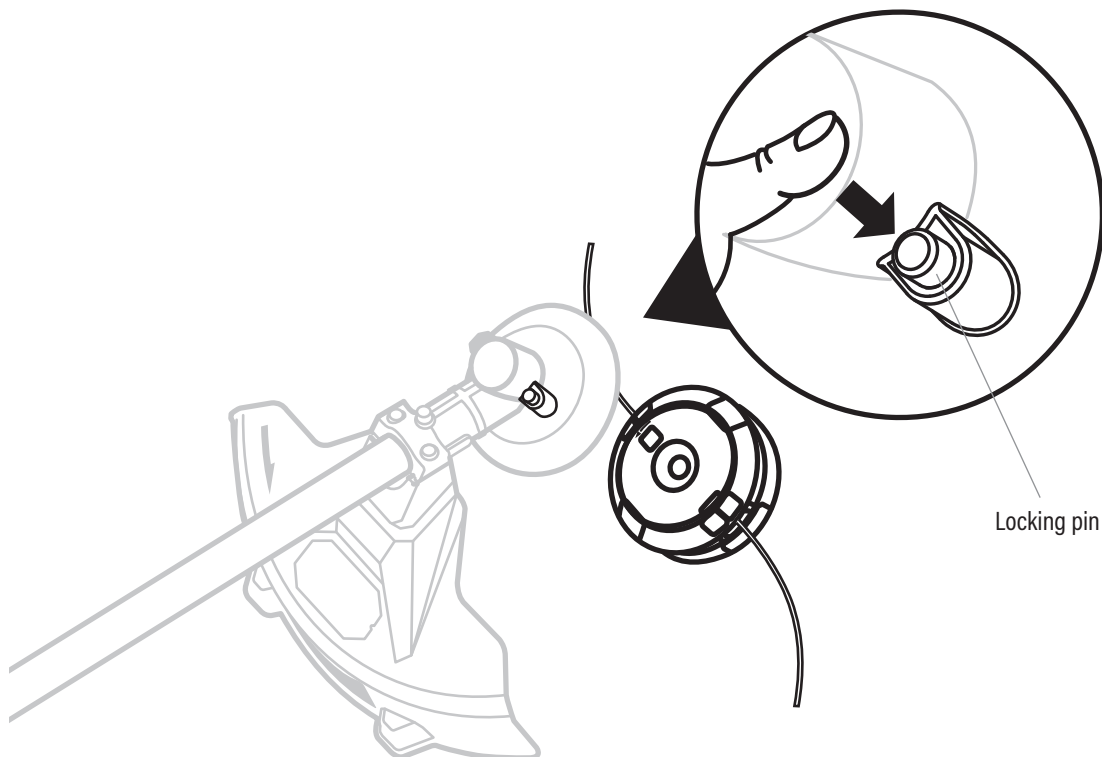


Fig.1

Remplacement de la tête de coupe

Contenu de l'emballage

- Tête de coupe
- Feuille d'instructions

Instructions

510789

Remplacement de la tête de coupe

1. La cartouche de ligne de votre coupe-bordures est entièrement jetable. Si la cartouche est endommagée, détachez la tête de coupe et jetez-la correctement. Vous pouvez alors fixer une cartouche de remplacement.
2. Appuyez sur la goupille de verrouillage et tournez la cartouche dans le sens inverse des aiguilles d'une montre pour la retirer (Image 1).
3. Appuyez sur la goupille de verrouillage et tournez la tête de coupe dans le sens des aiguilles d'une montre pour l'assembler (Image 1).

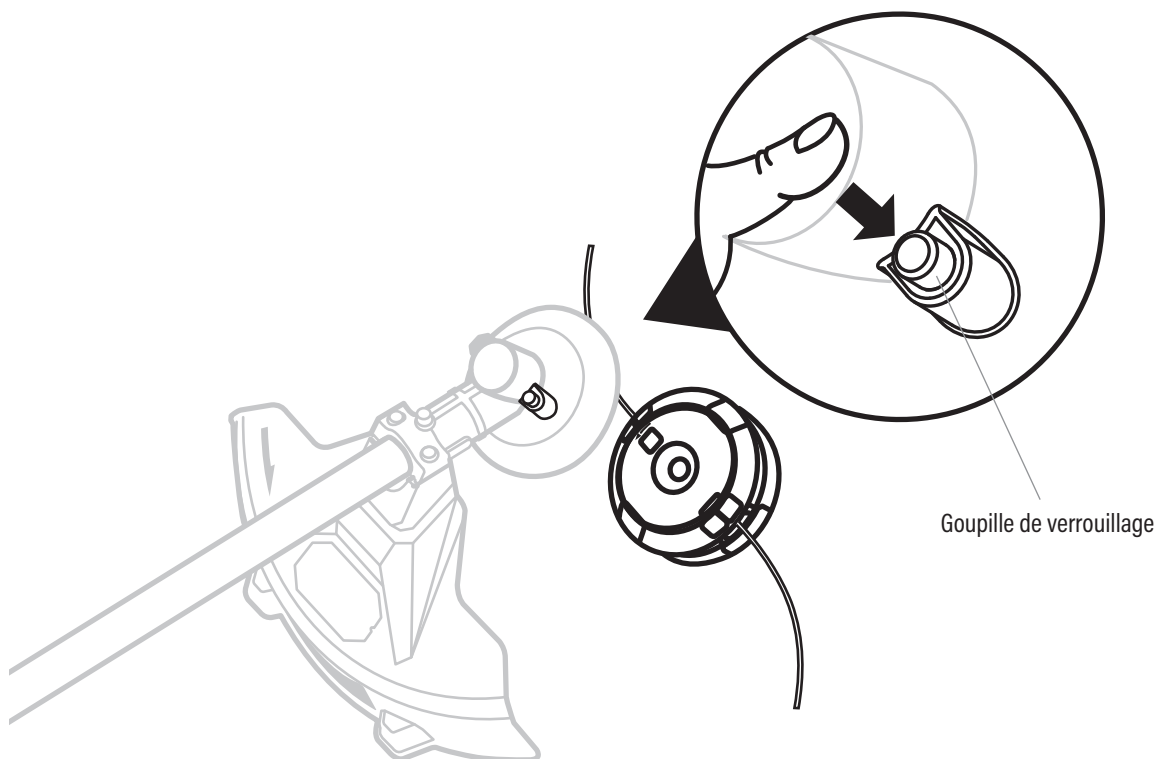


Image 1