
Instructions


86930

Packing List

- 1 x Locking bolt
- 1 x Parallel key
- 1 x Blade holder

Steps for Replacing the Blade Holder

1. Turn off the mower and wait for the blade to stop rotating. Remove the battery.
2. Turn the mower on its side so that the blade is perpendicular to the ground.
3. To remove the blade, unscrew the bolt with a suitable wrench and remove the blade.
4. Remove blade holder and replace with new components.
5. Reassemble.

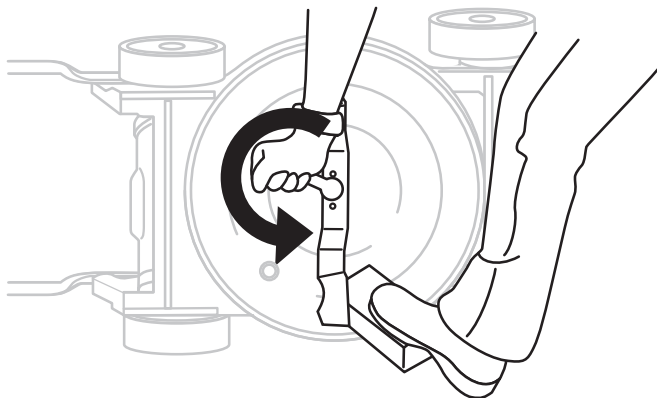

Garant

MC
TM

Remplacement du porte-lame

Instructions


86930

Contenu de l'emballage

- 1 x Boulon de fixation
- 1 x Clavette parallèle
- 1 x Porte-lame

Étapes pour remplacer le porte-lame

1. Éteignez la tondeuse et attendez que la lame cesse complètement de tourner. Retirez la batterie.
2. Placez la tondeuse sur le côté de façon à ce que la lame soit perpendiculaire au sol.
3. Pour retirer la lame, dévissez le boulon à l'aide d'une clé appropriée et retirez la lame.
4. Retirez le porte-lame et remplacez-le par les nouveaux composants.
5. Remontez l'ensemble.

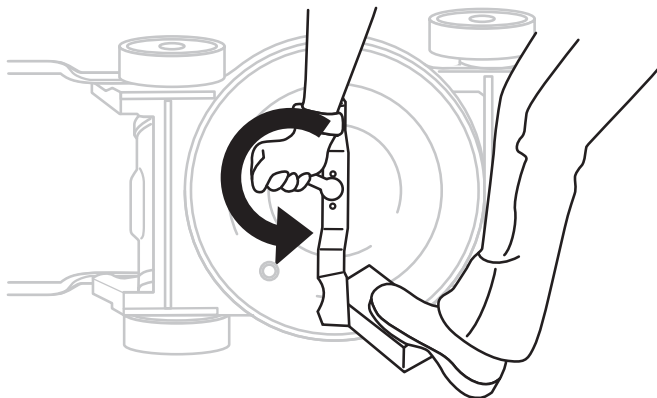

Pour toute question, veuillez visiter notre site internet : www.garant.com