

Garant


Hood Replacement Instructions

Instructions

86484

Packing List

- Hood
- Self tapping screw (5)
- Instructions sheet

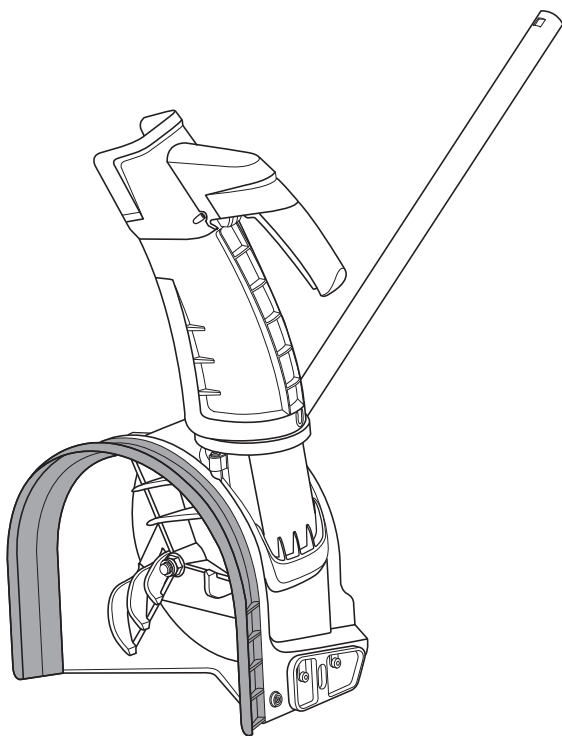

WARNING: To reduce the risk of injury, the user must read and understand the operator's manual before using this product. Save these instructions for future reference.

Steps for Replacing the Hood



WARNING: Make sure all moving parts are stopped completely and the battery pack is removed when replacing the safety guard.



WARNING: The hood is intended for prevent thrown objects including snow to hit the operator. Replace it when any worn indicators occur.

1. Stop the motor, remove the battery pack and wait for all moving parts to stop completely.
2. Lay the snow shovel attachment on its side for hood service.
3. Remove the five screws that are located on the attachment guard. (Fig. 1)
4. Replace the worn hood with a new one.
5. Tighten the screws that you removed before. Avoid over tightening the screw. Overtightening screw may strip plastic thread on.

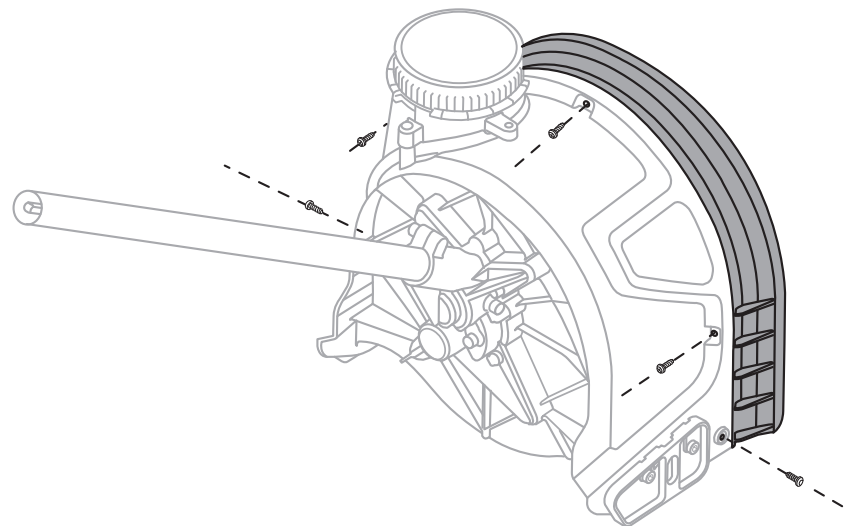


Fig. 1

Garant


Remplacement du capot

Instructions

86484

Contenu de l'emballage

- Capot
- Vis autoperceuses (5)
- Feuillelet d'instructions

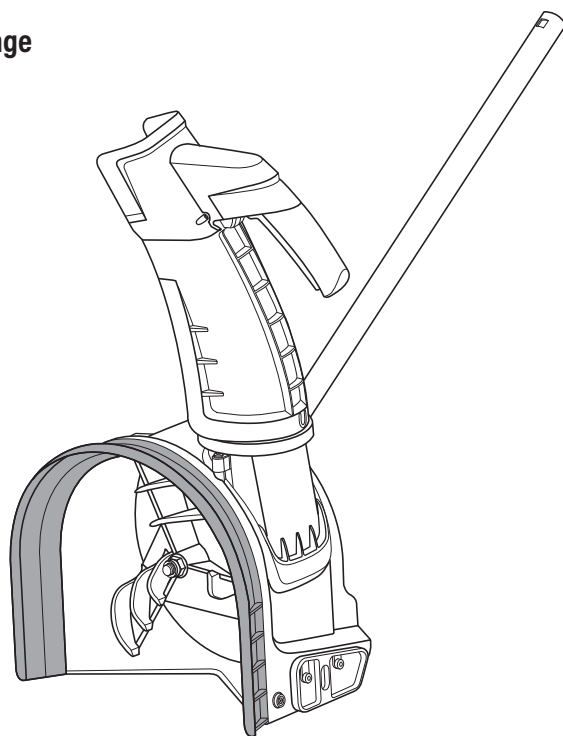

AVERTISSEMENT : Pour réduire le risque de blessure, l'utilisateur doit lire et comprendre le manuel d'utilisation avant de faire fonctionner ce produit. Conserver ces instructions pour référence ultérieure.

Étapes pour remplacer le capot



AVERTISSEMENT : S'assurer que toutes les pièces mobiles sont complètement arrêtées et que la batterie est retirée au moment du remplacement du dispositif de protection.



AVERTISSEMENT : Le capot est destiné à empêcher les objets projetés, y compris la neige, de frapper l'opérateur. Le remplacer en cas d'usure des indicateurs.

1. Arrêter le moteur, retirer la batterie et attendre l'arrêt complet de toutes les pièces mobiles.
2. Poser la pelle à neige sur le côté pour l'entretien du capot.
3. Retirer les cinq vis situées sur la protection de l'accessoire. (Image 1)
4. Remplacer le capot usé par un nouveau.
5. Serrer les vis retirées précédemment. Éviter de trop serrer la vis. Un serrage excessif de la vis risque d'endommager le filetage en plastique de la vis.

